

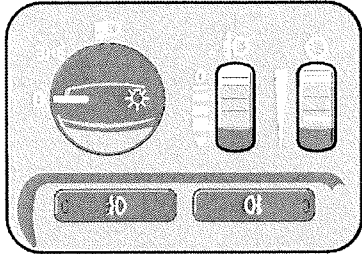


Adjusting, all markets except USA, United Kingdom and Japan

Warning! Always adjust the headlamp beam according to the legal requirements of the market.

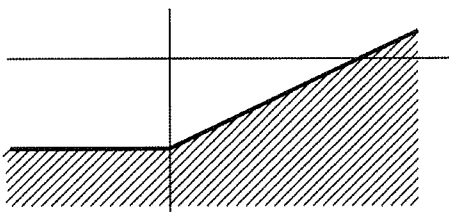

- Ignition and low beam on
- Check the button that controls the lighting level. Set the button to the 0 position
- Check the current. Check that the power supply is sufficient for the desired beam level
- **Caution! Always adjust the beam with low beam switched on.**

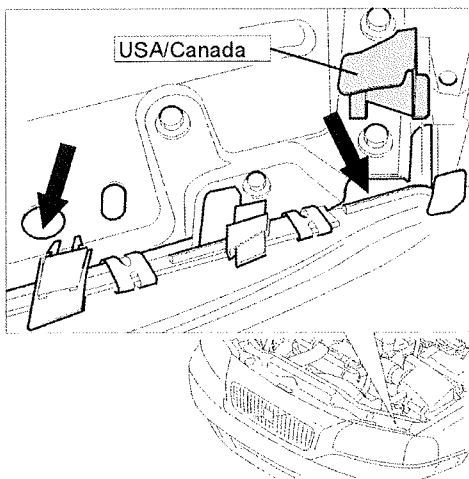

- Adjust the beam vertically (Y) using an Allen screw, as illustrated
- Adjust the beam horizontally (X) using an Allen screw, as illustrated
- Hint: Use a Ø6 mm Allen screw.

Warning! Always adjust the headlamp beam according to the legal requirements of the market.